
Dovetail Hook Bathroom Mirror Installation Guide

Factory-bonded mirror hangers | Standard 2-hook method | Optional 4-hook layout

01 Check and measure the hangers

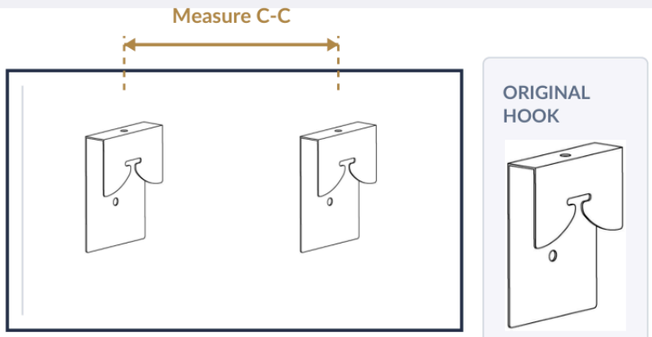


REAR VIEW - TWO FACTORY-BONDED HOOKS

The hooks are already bonded to the mirror.

Measure between the two hanging points.

02 Mark two level wall positions

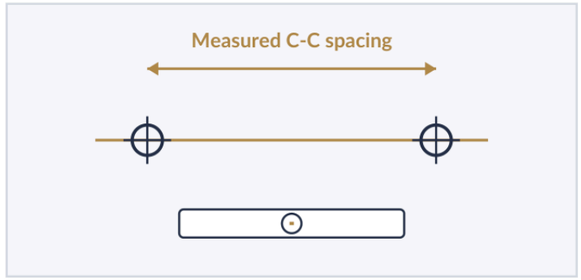


WALL - MARK WITH A LEVEL

Transfer the measured spacing to the wall.

Mark two points at the intended height.

03 Drill holes and install anchors

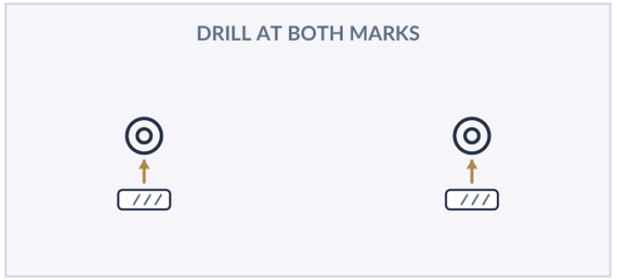

ANCHORS SUITABLE FOR THE WALL TYPE

Drill two holes at the marked positions.

Insert anchors matched to the wall substrate.

04 Fit the screws with head clearance






SIDE VIEW - SCHEMATIC

Drive screws into the anchors; do not seat the heads flush.

Leave enough clearance for the dovetail hooks to engage.

05 Hang the mirror and check engagement

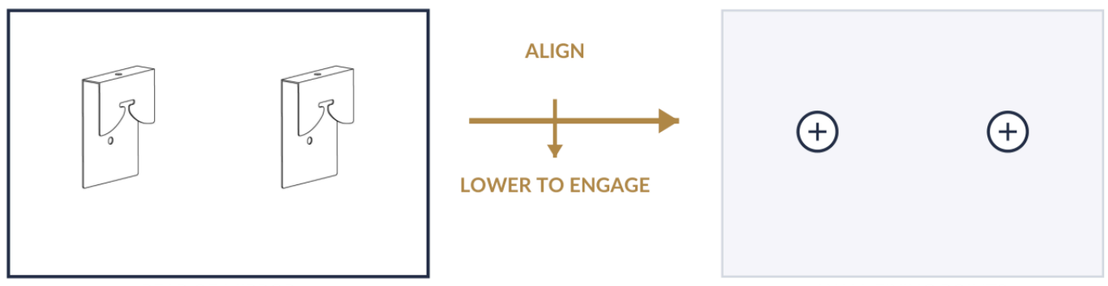

REAR OF MIRROR

WALL FIXING POINTS

Lift the mirror, align both bonded hooks with the screw heads.

Lower gently until seated; confirm level and secure support.

INSTALLATION NOTES | NOT A DRILLING TEMPLATE

Keep factory-bonded hooks in place. Verify screw clearance, fixings and wall strength.

Wire with power OFF. Engage every required hook before restoring power and testing.

OPTIONAL FOUR-HOOK CONFIGURATION

Two upper + two lower hangers,
when specified for the product.

