
Keyhole Slot Bathroom Mirror Installation Guide

Factory-bonded square aluminum frame | Two upper keyhole slots | Screw-and-anchor wall mounting

01 Measure the two keyhole slots

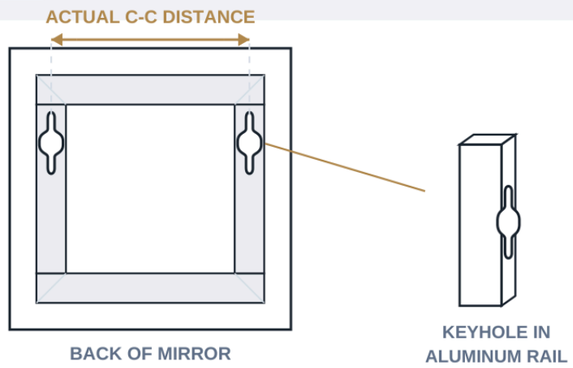


Measure the actual spacing between the two upper keyholes in the pre-bonded aluminum frame.

02 Mark two level wall points




Transfer the measured spacing to the wall.
Use a spirit level to align the two marks.

03 Drill and insert anchors

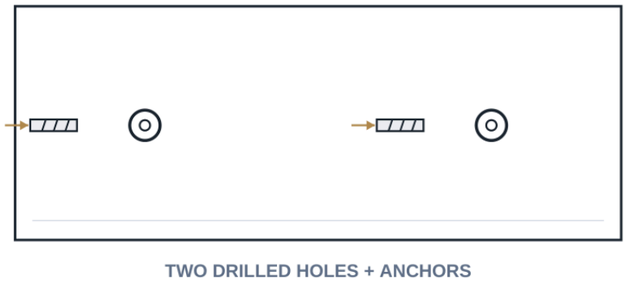

Drill the marked points and insert suitable expansion anchors for the wall construction.


04 Insert screws with a fitting head gap

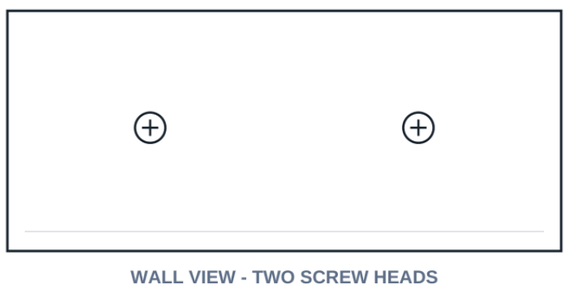



Drive compatible screws into the anchors, leaving enough head clearance for the keyhole slots. Confirm clearance with the actual frame.

05 Hang the mirror and verify

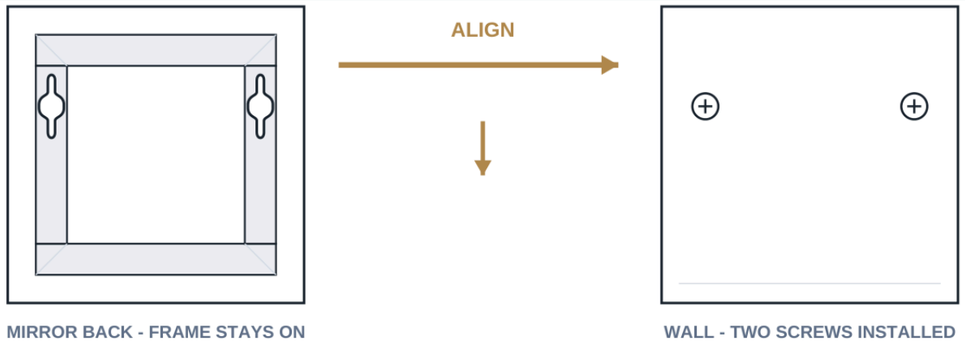

Align both keyholes with the screw heads and lower the mirror to seat.
Check that both slots are engaged and the mirror is secure and level.

INSTALLATION NOTES | NOT A DRILLING TEMPLATE

Do not remove the bonded frame. Confirm slot spacing, wall strength, appropriate screws and anchors.

Wire with power OFF before hanging; confirm both slots engage securely before restoring power and testing.