
NISSIYA

Z-BAR MIRROR INSTALLATION GUIDE

Wall-mounted bathroom mirror | Low-profile interlocking aluminum rail system

SYSTEM OVERVIEW


Two mating Z-bars secure the mirror to the wall.

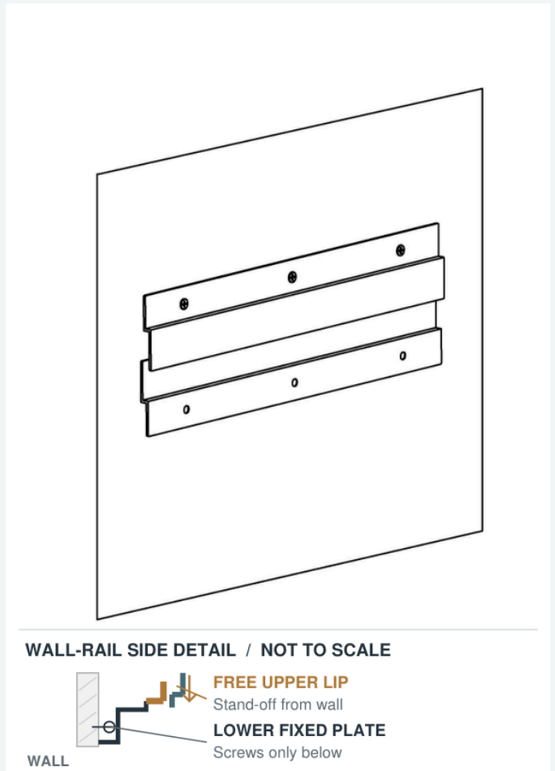

A **Mirror-side Z-bar**
Factory bonded to the back of the mirror; do not remove.

2 **No. 2 aluminum wall rail**
Fixed to the wall using suitable anchors and screws.

1 POSITION & MARK

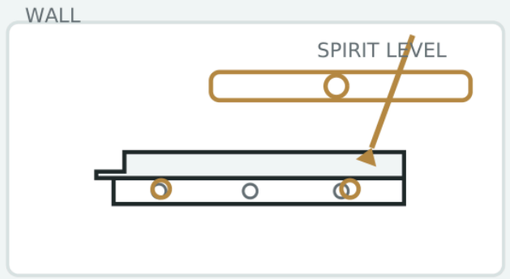


Hold No. 2 wall rail level against the wall.
Mark the fixing holes with a pencil.

2 DRILL & ANCHOR




Drill at the marked positions.
Insert wall anchors suitable for the wall type.

3 FIX THE WALL RAIL

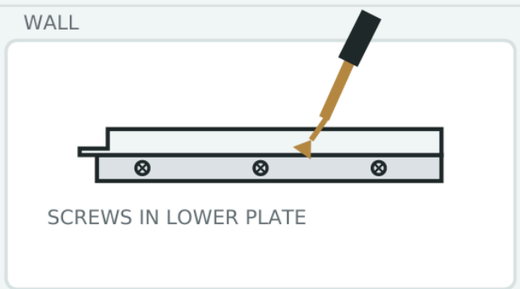

Fasten only the LOWER plate to the wall.
Keep the UPPER lip free and spaced off the wall.

4 HANG THE MIRROR

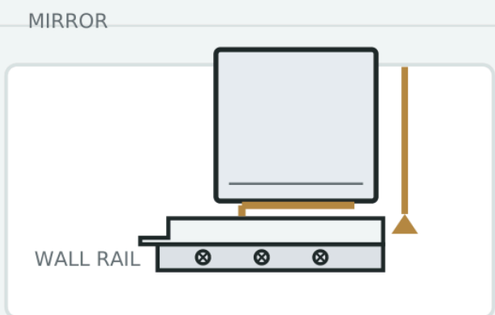

With power OFF, align the mirror-side rail above the free upper lip.
Lower gently until the two rails fully engage.

FINAL CHECK

Confirm that the Z-bars are fully engaged and the mirror sits level, stable and close to the wall.

Never force or slide the mirror if the rails are misaligned. Reposition carefully before releasing support.

SAFETY & INSTALLATION NOTES

Use anchors, screws and fixing locations appropriate to the wall substrate and mirror load. Verify load capacity on site.

Connect wiring with power OFF before hanging; restore power and test only after the mirror is securely seated.